# Top Auger

Trash Spreader Pan

# Installation and Operation

Owner's Manual PNEG-833





#### **Table of Contents**

General Precautions4
Top Auger Trash Spreader Pan Installation 5
Dimple Location Diagram5
Hole Location Diagram 6
Pre - '99 Dryer Dimple Location Diagram 7
Punch and Hole Location8
Front Fill and Rear Fill Installation9
Bracket Assembly 10
Splice Pan Bracket Assembly 11
Trash Pan Spreader Installation 12
Warranty 13

#### SAFETY FIRST General Safety Statements

The GSI Group Inc.'s Principal concern is your safety and the safety of others associated with grain handling equipment. We want to keep you as a customer. This manual is to help you understand safe operating procedures and some problems which may be encountered by the operator and other personnel.

As owner and/or operator, it is your responsibility to know what requirements, hazards and precautions exist and inform all personnel associated with, or in the area of the Fill/Feed System. Safety precautions may be required from the personnel. Avoid any alteration to the equipment. Such alterations may produce a very dangerous situation, where serious injury or death may occur.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety mes-

sages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injry.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

## **CAUTION**

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



# BE ALERT! Danger!

Personnel operating or working around electrical equipment should read this manual. This

manual must be delivered with equipment to its owner. Failure to read this manual and its safety instructions is a misuse of the equipment.

#### **Important!**

This product may have sharp edges! To avoid injury handle sharp edges with caution and use proper protective clothing and equipment at all times.

The GSI Group Inc. recommends that you shut off all power supplied to your Top Auger while installing this additional equipment. This will reduce the risks of injury associated with the Rotating Flighting Assembly.

If you have any questions regarding installation and safety, please contact your GSI, Inc. representative.

#### Top Auger Trash Spreader Pan Installation

Begin by starting on the fill end of the dryer, under the first safety handrail mounting bracket, by drilling a 3/8" hole at the dimple location (see fig. 1).

Using the hole pattern of the longest trash pan in the kit and the dimples on the top auger trough side as guidelines, drill the rest of the holes for the first trash pan section.

If a splice pan is included in the kit, drill a 3/8" hole 16" from the center of the last hole drilled. Using the last hole drilled as first hole of the trash pan, use dimples to drill 3/8" holes to match the hole pattern of the second longest trash pan section.

If a second splice pan is included in the kit, drill 3/8" hole 16" from the center of the last hole. Using the last hole drilled as first hole of trash pan, use dimples to drill 3/8" holes to match the hole pattern of the shortest trash pan in the kit (see fig. 2)


#### **IMPORTANT:**


Note for Installation pn Pre-'99 Dryer Units

For installating this kit on Pre-'99 dryer units, please note that dimples are in-line with the bottom bolt of the handrail mounting bracket (see fig. 3). Start at the fill end of the dryer and measure down 1" from the center of the bottom bolt of the safety handrail bracket. Punch at this location. Using the hole pattern of the longest trash pan in the kit, punch the holes 1" down from the dimples in the top auger trough side.


If a splice pan is included in the kit, punch 16" from the center of the last punch locations.

If a second splice pan is included in the kit, punch 16" from the center of the last punch, 1" below the dimple. Using the last hole punched as first hole of trash pan, punch to match the hole pattern of the shortest trash pan in the kit. Drill 3/8" holes at the punch locations (See fig. 4).

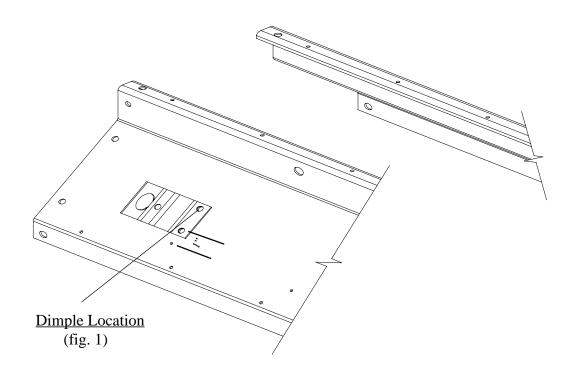


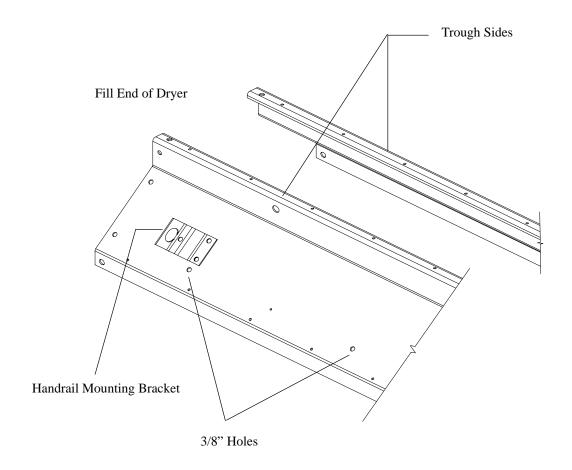

Hole Location (fig. 2)

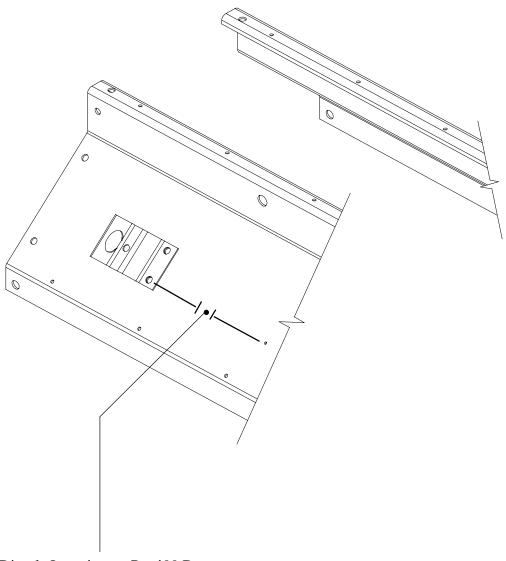

<u>Dimple Location on Pre-'99 Dryer</u> (fig. 3)

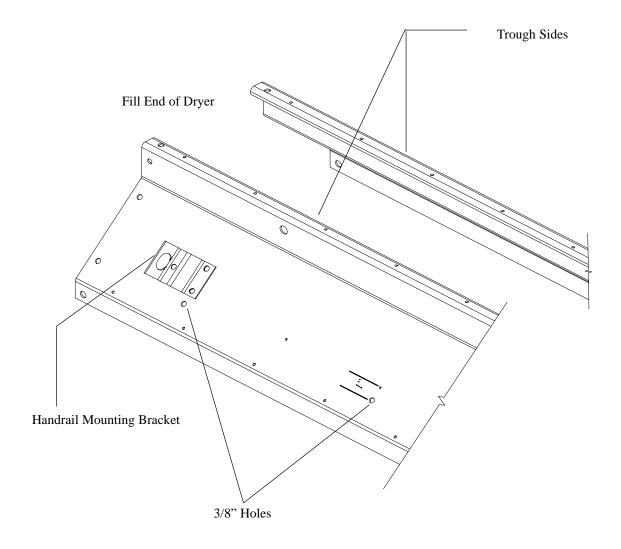

Punch & Hole Location (fig. 4)

#### **Important:**


It is important to identify the type of spreader pan you will be installing. The following illustrations will help you prepare for your installation type. Please identify which type of installation is applicable and familiarize yourself with those parts.

#### **Front Fill**

If the dryer is front filling, the trash pan is located on the right side of the auger, looking at the dryer from the front.

#### **Rear Fill**

On rear filling driers the trash spreader pan is located on the left side of the auger, looking at the drier from the rear.

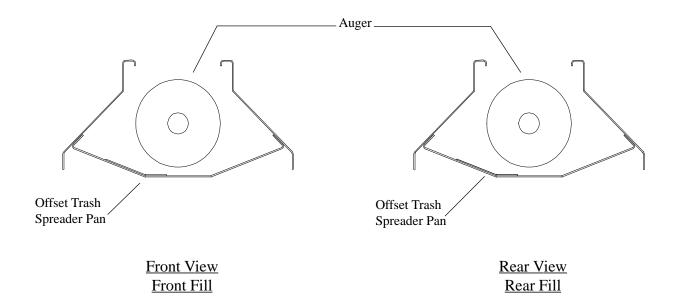


Offset Trash Spreader Pan Front and Rear Views

(fig. 5)

#### **Bracket Assembly**


Assemble the trash pan and brackets on the ground. The brackets are to be assembled on the under side of the trash pan using 5/16" x 3/4" whiz bolts and 5/16" whiz nuts (see fig. 6).

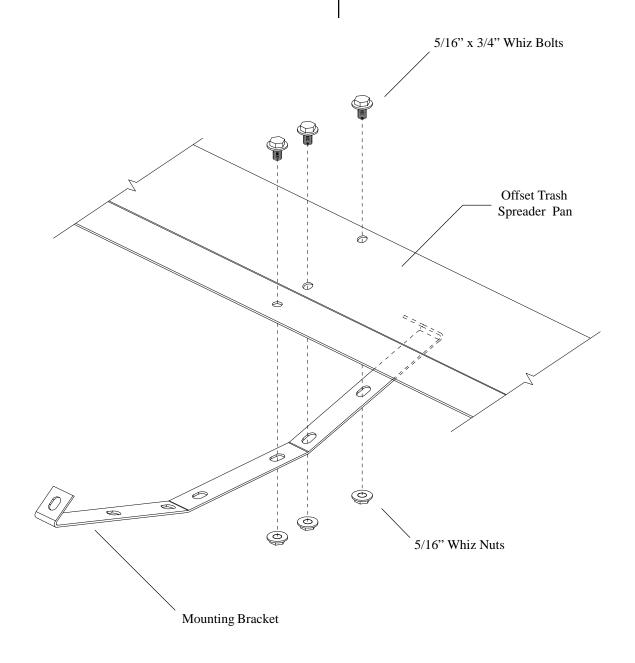

Bracket Assembly (fig. 6)

#### **Splice Pan Bracket Assembly**

If a splice pan is included in the trash spreader pan kit, assemble last bracket on trash pan section with splice pan in between the trash pan and bracket (see fig. 7).

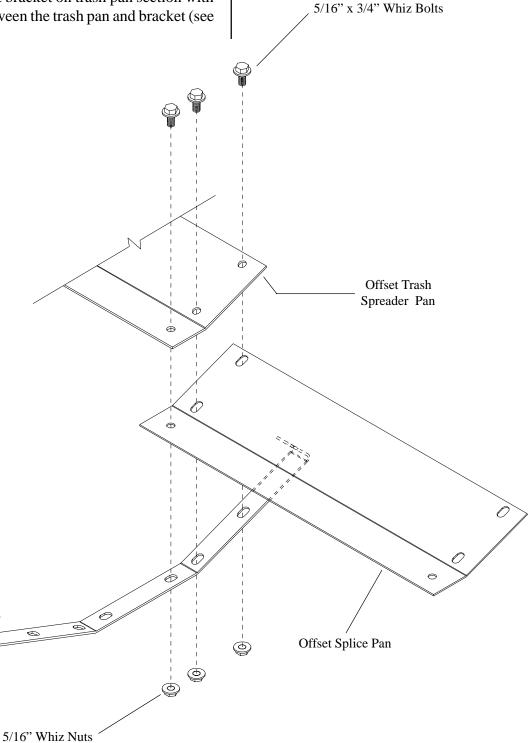


Splice Pan Bracket Assembly (fig. 7)

#### **Trash Pan Spreader Installation**

If a second trash pan section is included, assemble the brackets, skipping the first set of holes on the trash pan. If a second splice pan is included in the trash spreader pan kit, follow the above instructions. Assemble the third trash pan skipping the first set of holes.

Install the first section of the trash pan spreader assembly. Use 5/16" x 3/4" whiz bolts and 5/16" whiz nuts (see fig. 8).

Then install the second section, the second longest, of the assembled trash pan if applicable. If a third section is included in the trash spreader pan kit, then install the third assembled section at this time.

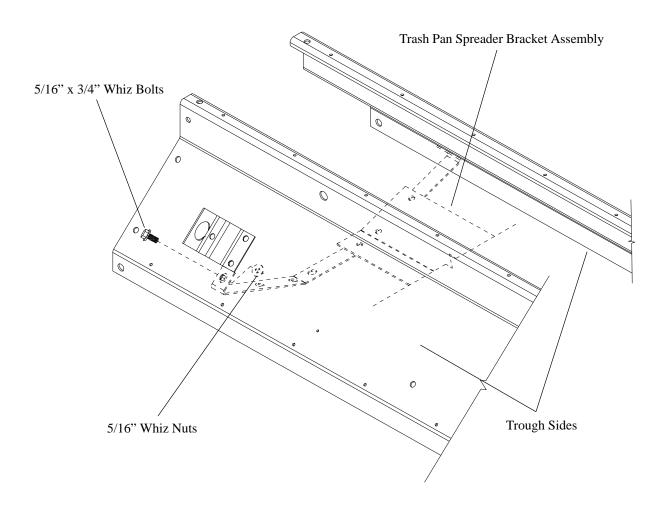

<u>Trash Pan Spreader Installation</u> (Fig. 8)

#### **WARRANTY**

THE GSI GROUP, INC. ("GSI") WARRANTS ALL PRODUCTS MANUFACTURED BY GSI TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USAGE AND CONDITIONS FOR A PERIOD OF 12 MONTHS AFTER RETAIL SALE TO THE ORIGINAL END USER OF SUCH PRODUCTS. GSI'S ONLY OBLIGATION IS, AND PURCHASER'S SOLE REMEDY SHALL BE FOR GSI, TO REPAIR OR REPLACE, AT GSI'S OPTION AND EXPENSE, PRODUCTS THAT, IN GSI'S SOLE JUDGMENT, CONTAIN A MATERIAL DEFECT DUE TO MATERIALS OR WORKMANSHIP. ALL DELIVERY AND SHIPMENT CHARGES TO AND FROM GSI'S FACTORY WILL BE PURCHASER'S RESPONSIBILITY. EXPENSES INCURRED BY OR ON BEHALF OF THE PURCHASER WITHOUT PRIOR WRITTEN AUTHORIZATION FROM AN AUTHORIZED EMPLOYEE OF GSI SHALL BE THE SOLE RESPONSIBILITY OF THE PURCHASER.

EXCEPT FOR THE ABOVE STATED EXPRESS LIMITED WARRANTIES, GSI MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IN CONNECTION WITH (i) PRODUCT MANUFACTURED OR SOLD BY GSI OR (ii) ANY ADVICE, INSTRUCTION, RECOMMENDATION OR SUGGESTION PROVIDED BY AN AGENT, REPRESENTATIVE OR EMPLOYEE OF GSI REGARDING OR RELATED TO THE CONFIGURATION, INSTALLATION, LAYOUT, SUITABILITY FOR A PARTICULAR PURPOSE, OR DESIGN OF SUCH PRODUCT OR PRODUCTS.

IN NO EVENT SHALL GSI BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF ANTICIPATED PROFITS OR BENEFITS. PURCHASER'S SOLE AND EXCLUSIVE REMEDY SHALL BE LIMITED TO THAT STATED ABOVE, WHICH SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT PURCHASED. THIS WARRANTY IS NOT TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER. GSI SHALL HAVE NO OBLIGATION OR RESPONSIBILITY FOR ANY REPRESENTATIVE OR WARRANTIES MADE BY OR ON BEHALF OF ANY DEALER, AGENT OR DISTRIBUTOR OF GSI.

GSI ASSUMES NO RESPONSIBILITY FOR FIELD MODIFICATIONS OR ERECTION DEFECTS WHICH CREATE STRUCTURAL OR STORAGE QUALITY PROBLEMS. MODIFICATIONS TO THE PRODUCT NOT SPECIFICALLY COVERED BY THE CONTENTS OF THIS MANUAL WILL NULLIFY ANY PRODUCT WARRANTY THAT MIGHT HAVE BEEN OTHERWISE AVAILABLE.

THE FOREGOING WARRANTY SHALL NOT COVER PRODUCTS OR PARTS WHICH HAVE BEEN DAMAGED BY NEGLIGENT USE, MISUSE, ALTERATION OR ACCIDENT. THIS WARRANTY COVERS ONLY PRODUCTS MANUFACTURED BY GSI. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. GSI RESERVES THE RIGHT TO MAKE DESIGN OR SPECIFICATION CHANGES AT ANY TIME.

PRIOR TO INSTALLATION, PURCHASER HAS THE RESPONSIBILITY TO RESEARCH AND COMPLY WITH ALL FEDERAL, STATE AND LOCAL CODES WHICH MAY APPLY TO THE LOCATION AND INSTALLATION.



a division of

### THE GSI GROUP



G.S.I of The GSI Group, Inc. 1004 E. Illinois St.

P.O. Box 20 Assumption, IL. 62510-0020 Phone: 217.226.4421 Fax: 217.226.4420

e-mail: gsi@grainsystems.com

internet: http://www.grainsystems.com