
Farm/Commercial Distributor

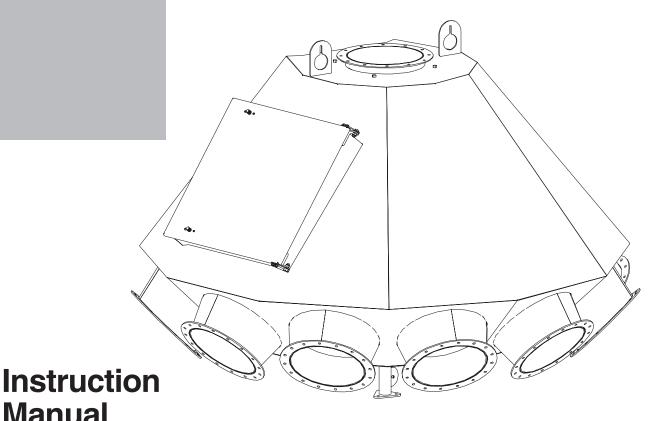

Manual PNEG-1385

DATE: 6-16-04



Table of Contents

Safety Guidelines	4
Introduction	6
Installation Notes	7
Maintenance	8
Replacing Wear Liner	8
Grease Bearing	8
Replace Brush Assembly	10
Parts	11
DFB08645GL (8" 6 Hole)	12
DFB08845GL (8" 8 Hole)	13
DFB081045GL (8" 10 Hole)	14
DFB10645GL - Drawing A (10" 6 Hole)	15
DFB10645GL - Drawing B (10" 6 Hole)	16
DFB10845GL (10" 8 Hole)	17
DFB101045GL (10" 10 Hole)	18
DFB12445GL (12" 4 Hole)	19
DFB12645GL (12" 6 Hole)	20
DFB12845GL (12" 8 Hole)	21
Warranty	Inside Back Cover

SAFETY GUIDELINES

This manual contains information that is important for you, the owner/operator, to know and understand. This information relates to protecting *personal safety* and *preventing equipment problems*. It is the responsibility of the owner/operator to inform anyone operating or working in the area of this equipment of these safety guidelines. To help you recognize this information, we use the symbols that are defined below. Please read the manual and pay attention to these sections. Failure to read this manual and it's safety instructions is a misuse of the equipment and may lead to serious injury or death.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE

NOTE indicates information about the equipment that you should pay special attention to.

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from the manufacturer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machinery in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your dealer.




PREPARE FOR EMERGENCIES

Be prepared if fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

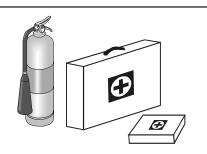

WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Safety glasses should be worn at all times to protect eyes from debris.

Wear gloves to protect your hands from sharp edges on plastic or steel parts.

A respirator may be needed to help prevent breathing potentially toxic fumes and dust.

Wear hard hat and steel toe boots to help protect your head and toes from falling debris.

Eye Protection

Gloves

Steel Toe Boots

Respirator

Hard Hat











Introduction

Thank you for choosing this product. It is designed to give excellent performance and service for many years.

This manual covers general information on the distributor installation. Due to the wide variety of field conditions we cannot cover every aspect of installation. We offer one method for installing equipment but, rely on your qualified contractor's experience and techniques. Some conditions and surroundings do not allow certain practices during the installation of equipment. We can not be responsible for the installation of the distributor and accessories. We encourage anyone installing, or maintaining this equipment to thoroughly read this manual before proceeding.

The company is the vendor of the distributor and certain of its optional accessories only, and does not assume responsibility for the installation. The installation recommendations contained within this manual are for consideration only.

READ THIS MANUAL carefully to learn how to properly use and install this equipment. Failure to do so could result in personal injury or equipment damage.

INSPECT the shipment immediately upon arrival. The Customer is responsible for ensuring that all quantities are correct. Report any damage or shortages by recording a detailed description on the Bill of Lading to justify the Customer's claim from the Transport Firm. Our responsibility for damage to the equipment ends with acceptance by the delivering carrier. Save all paperwork and documentation furnished with any of the equipment.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your equipment and should be easily accessible when needed.

A WARRANTY is provided as part of the company's support program for customers who use and maintain their equipment as described in the manual. The warranty is explained on the warranty page located on the inside back cover of this manual.

This warranty provides you the assurance that the company will back its products where defects appear within the warranty period. Should the equipment be abused, or modified to change its performance beyond the factory specifications, the warranty will become void and field improvements may be denied.

NOTE

All information, illustrations, photos, and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Installation Notes

A DANGER


If you must get inside of Distributor, turn **OFF** and **LOCK OUT** all power sources. **DO NOT** operate the Distributor while inside.

A DANGER

Crush Hazard! Lifting lugs are to be used for placement only. **DO NOT** use lifting lugs for structural support. (See Figure 1)

ACAUTION

DO NOT use a clamp band when attaching the down spout to the inlet flange. A bolted connection is required at this point. (See Figure 1.)

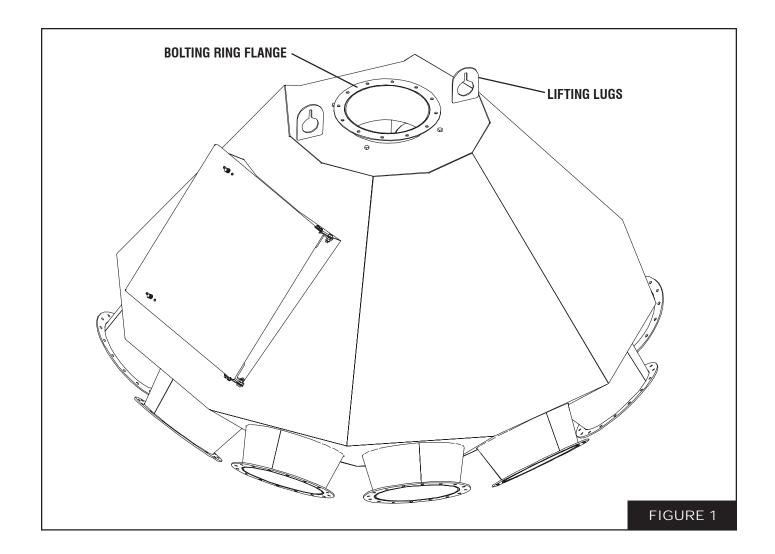

Maintenance

REPLACING THE WEAR LINER


Position the spouting near the door. Remove the transition extension tube (See Figure 2) Remove the transition spout (See Figure 2). Reverse the transition box which will allow access to the hardware holding the liner in (See Figure 3). Replace the old liner with the new liner. (See Figure 4) Replace the transition spout and transition extension tube.


Replacement Liner Numbers:


8" - DFB0183, 10" - DFB0051, 12" - DFB0121

GREASING THE BEARING

The bearing is greased at the factory and is ready for operation. Lubricate annually using a No. 2 Lithium based grease or equivalent. (See Figure 2)

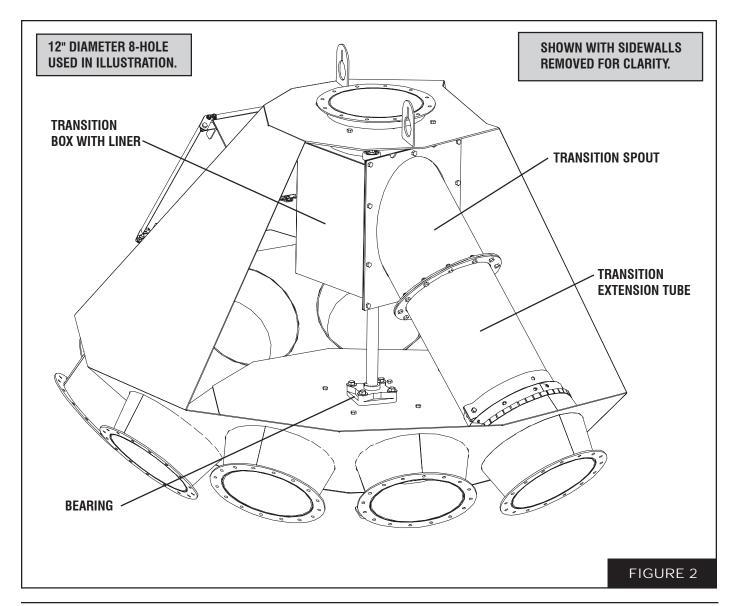

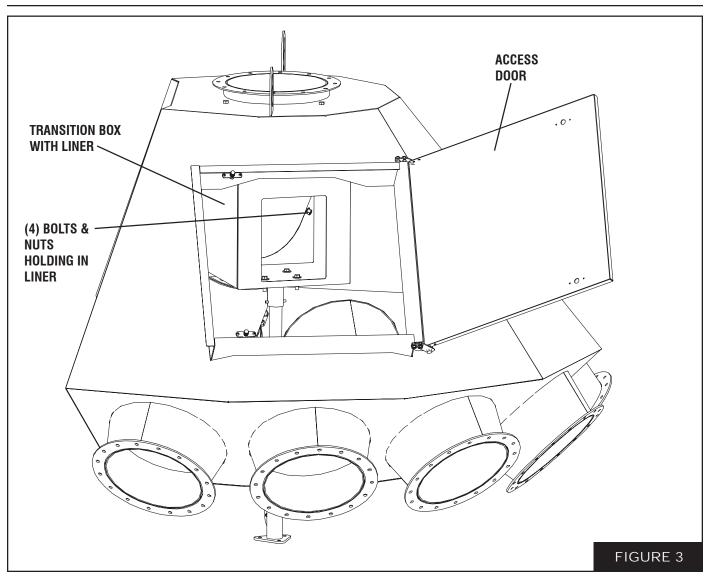

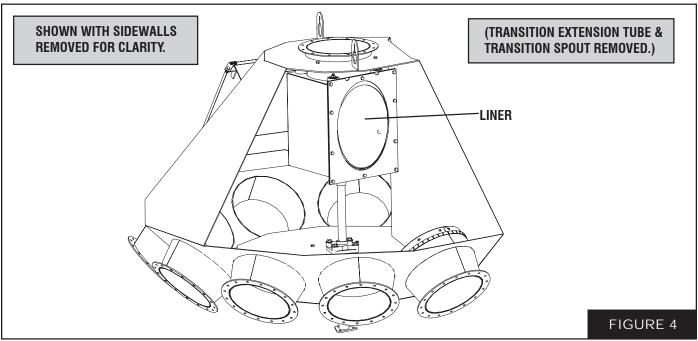


REPLACING THE BRUSH MOUNT ASSEMBLY

Position the spouting near the door. Remove the transition extension tube (See Figure 5). Loosen the clamp band and remove old brush assembly from the transition extension tube. Replace the new brush assembly onto transition extension tube and tighten in place using the clamp band. Replace the transition extension tube/brush assembly.

NOTE: Make sure the seam of the brush assembly is facing towards the top as shown in Fig 5. The brush bristles should be somewhat snug against the spout wall. Operate the spout to all outlets to insure proper alignment and clearance.

Replacement Brush Assembly Numbers:


8" - DFB0189, 10" - DFB0060, 12" - DFB0127

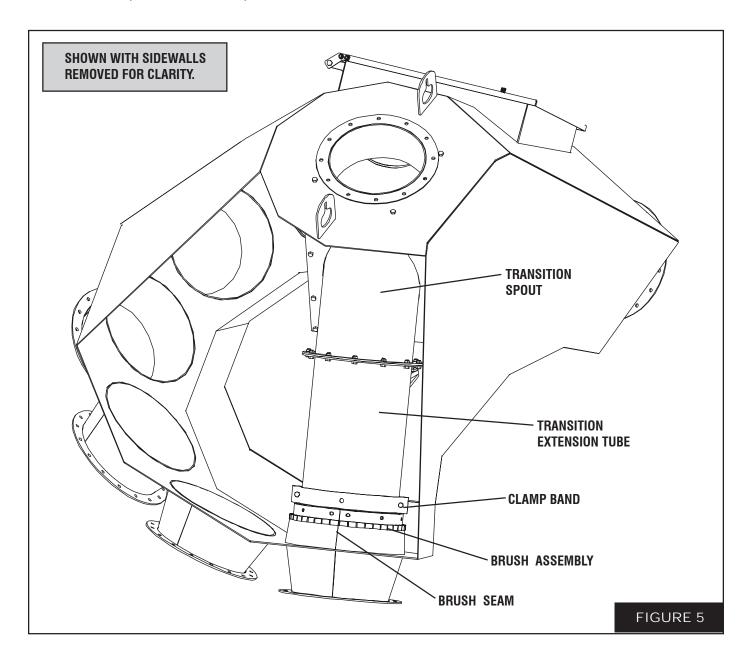


Parts List

PAGE #	PART #	DESCRIPTION
12.	DFB08645GL	- 8" 6 Hole, 45° Distributor Assembly
13.	DFB08845GL	- 8" 8 Hole, 45° Distributor Assembly
14.	DFB081045GL	8" 10 Hole, 45° Distributor Assembly
15.	DFB10645GL	- 10" 6 Hole, 45° Distributor Assembly - Drawing A
16.	DFB10645GL	- 10" 6 Hole, 45° Distributor Assembly - Drawing B
17.	DFB10845GL	- 10" 8 Hole, 45° Distributor Assembly
18.	DFB101045GL	10" 10 Hole, 45° Distributor Assembly
19.	DFB12445GL	- 12" 4 Hole, 45° Distributor Assembly
20.	DFB12645GL	- 12" 6 Hole, 45° Distributor Assembly
21.	DFB12845GL	- 12" 8 Hole, 45° Distributor Assembly

DFB08645GL 8" Six Hole, 45° Distributor Assembly

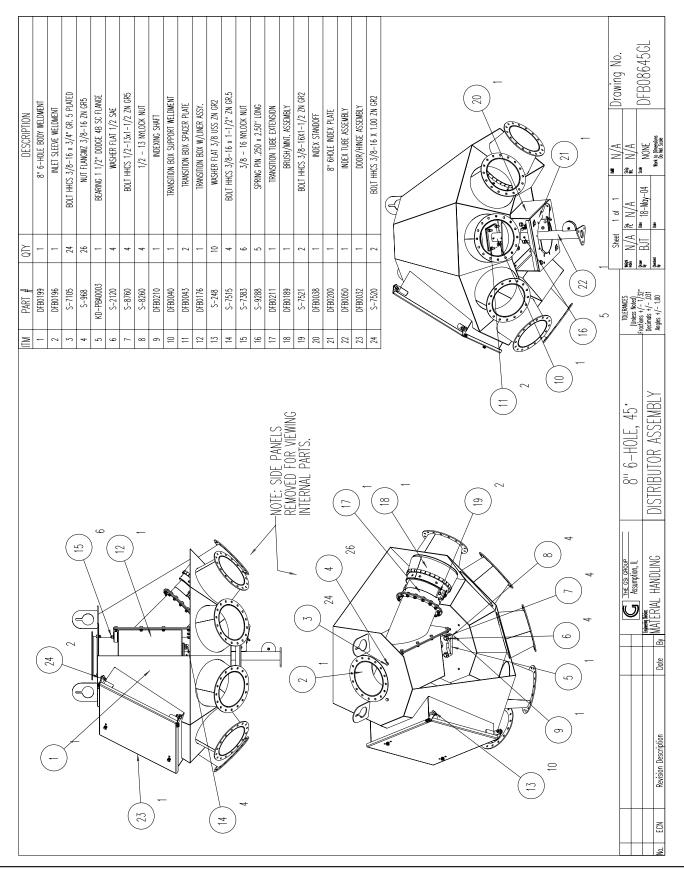

DFB08845GL 8" Eight Hole, 45° Distributor Assembly

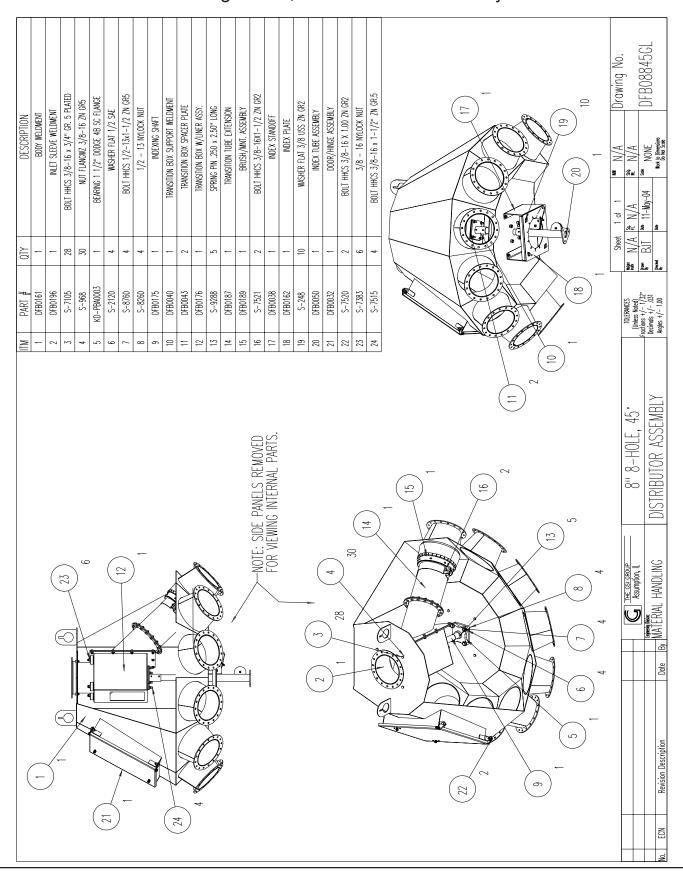


DFB081045GL

8" Ten Hole, 45° Distributor Assembly

QTY DESCRIPTION		1 INLET SLEEVE WELDMENT	28 BOLT HHCS 3/8-16 x 3/4" GR. 5 PLATED		1 BEARIN	4 WASHER FLAT 1/2 SAE	4 BOLT HHCS 1/2-13x1-1/2 ZN GR5	4 1/2 - 13 NYLOCK NUT	INDEXING SHAFT	1 TRANSITION BOX SUPPORT WELDMENT	2	1 TRANSITION BOX W/LINER ASSY.	5 SPRING PIN .250 x 2.50" LONG	1 TRANSTION TUBE EXTENSION	1 BRUSH/MNT, ASSEMBLY	2 BOLT HHCS 3/8-16X1-1/2 ZN GR2	1 INDEX STANDOFF	1 10" 10—HOLE INDEX PLATE	6 WASHER FLAT 3/8 USS ZN GRZ	1 INDEX TUBE ASSEMBLY	YINGP ASSEMBLY	2 BOLT HH	Ç	4 BOLT HHCS		Sheet 1 of 1 W N/A Drawing No.
PART #	DFB0213	DFB0196	S-7105	S-968	KD-PBA0003	S-2120	S-8760	S-8260	DFB0226	DFB0040	DFB0043	DFB0176	S-9288	DFB0227	DFB0189	S-7521	DFB0038	DFB0082	S-248	DFB0050	DFR0032	S-7520	5-7383	S-7515		10LERANCES (Unless Noted) (Fractions +/- 1/32" Decimals +/- 1,031 Angles +/- 1,00
MI	-	7	3	4	2	9	7	∞	6	0	=	12	13	14	15	16	17	81	19	70	21	72	23	24) P.
			1												4 ANDTE, CIDE DANELS DEMONED	NOIL, JUL TAINEL NEWOVED FOD MEMING INTERNAL DADTS	ON VIEWING INTENNAL FANTS.								$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	C The CSL GROUP 8" 10-HOLE, 45" Assumption, IL Assumption, IL


DFB10645GL 10" Six Hole, 45° Distributor Assembly - Drawing A

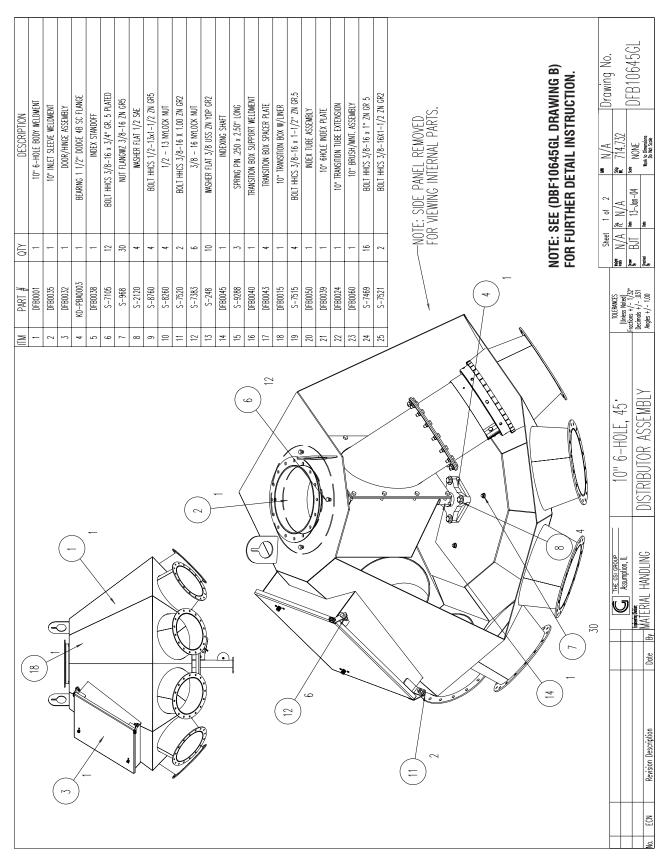

$DFB10645GL \\ 10" \ Six \ Hole, \ 45^{\circ} \ Distributor \ Assembly \ - \ Drawing \ B$

DFB0001 1 1 1 1 1 1 1 1 1	DESCRIPTION 10" 6-HOLE BODY WELDMENT	10" INLET SLEEVE WELDMENT	DOOR/HINGE ASSEMBLY	BEARING 1 1/2" DODGE 4B SC FLANGE	INDEX STANDOFF	BOLT HHCS 3/8-16 x 3/4" GR. 5 PLATED	NUT FLANGWZ 3/8-16 ZN GR5	WASHER FLAT 1/2 SAE	BOLT HHCS 1/2-13x1-1/2 ZN GR5	1/2 - 13 NYLOCK NUT	BOLT HHCS 3/8-16 X 1.00 ZN GR2	3/8 – 16 NYLOCK NUT	WASHER FLAT 3/8 USS ZN YDP GR2	INDEXING SHAFT	SPRING PIN .250 x 2.50" LONG	TRANSITION BOX SUPPORT WELDMENT	TRANSITION BOX SPACER PLATE	10" TRANSITION BOX W/LINER	BOLT HHCS 3/8-16 x 1-1/2" ZN GR.5	INDEX TUBE ASSEMBLY	10" GHOLE INDEX PLATE	10" TRANSITION TUBE EXTENSION	10" BRUSH/MNT. ASSEMBLY	BOLT HHCS 3/8-16 x 1" ZN GR 5	BOLT HHCS 3/8-16X1-1/2 ZN GR2	2 N/A Drawing No.
24 PERIOR 1 PERIOR 1 PERIOR 1 PERIOR 2 PERIOR	QTY -		-	-			30	4	4	4	2	9	10	-	3	-	4	-	4	1	-	-	-	16	2	Sheet N/A
24 4 4 4 6 17 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1																										10.ERANCES (University Notes) (University Not
																- >										

DFB10845GL 10" Eight Hole, 45° Distributor Assembly

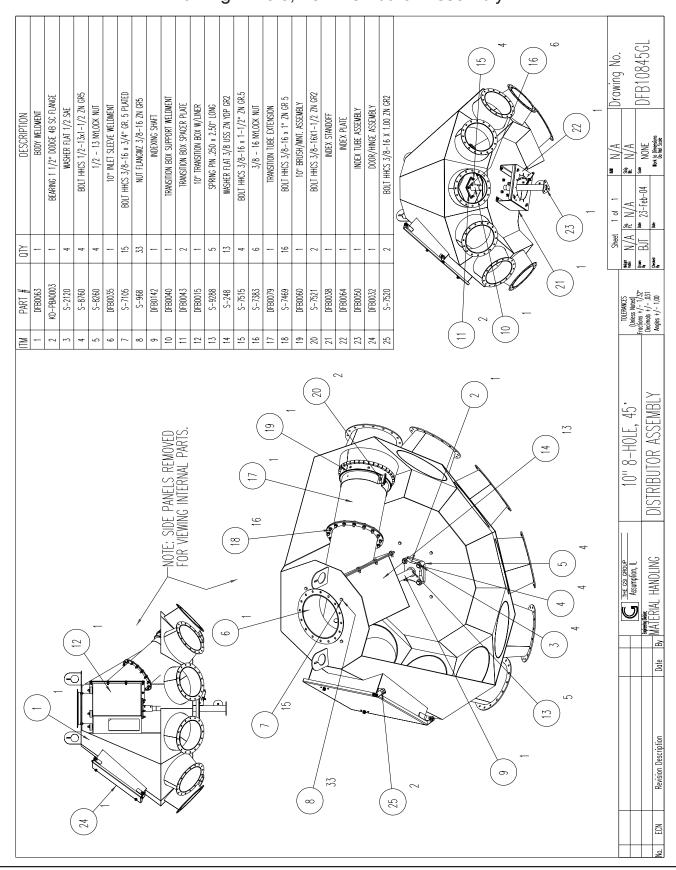

DFB101045GL

10" Ten Hole, 45° Distributor Assembly

M	1 PARIS 1 BERNO BERNO 1 BERN	1												_	_					,							, , , , , , , , , , , , , , , , , , , ,	
IM	13 PART 1 1 1 1 1 1 1 1 1	1	BODY WELDMENT SOOTH THE STANDARD STAND	BEARING 1 1/2" DODGE 4B SC FLANGE	WASHER FLAT 1/2 SAE	BOLT HHCS 1/2-13x1-1/2 ZN GR5	1/2 - 13 NYLOCK NUT	10" INLET SLEEVE WELDMENT	BOLT HHCS 3/8-16 x 3/4" GR. 5 PLATED	NUT FLANCWZ 3/8-16 ZN GR5	INDEXING SHAFT	Transition box support weldment	TRANSITION BOX SPACER PLATE	SPRING PIN .250 x 2.50" LONG	10" TRANSTION BOX W/LINER	WASHER FLAT 3/8 USS ZN GRZ	BOLT HHCS 3/8-16 x 1-1/2" ZN GR.5	3/8 - 16 NYLOCK NUT	Transition tube extension	10" BRUSH/MNT. ASSEMBLY	BOLT HHCS 3/8-16X1-1/2 ZN GR2	INDEX STANDOFF	10" 10-HOLE INDEX PLATE	INDEX TUBE ASSEMBLY	DOOR/HINGE ASSEMBLY	BOLT HHCS 3/8-16 X 1,00 ZN GR2	1 of 1	R. N/A Site N/A Dee 05-Mar-04 Sode NONE
IM	13 1 1 1 1 1 1 1 1 1	6	<u>-</u>	-	4	4	4	-	28	30	-	-	2	5	-	0	4	9	-	-	2	-	-	-	-	2	Sheet	
NOTE: SIDE PANELS NOTE: SIDE PA	13	13	DFB0143	KD-PBA0003	S-2120	S-8760	S-8260	DFB0035	S-7105	S-968	DFB0144	DFB0040	DFB0043	S-9288	DFB0015	S-248	S-7515	S-7383	DFB0093	DFB0060	S-7521	DFB0038	DFB0082	DFB0050	DFB0032	S-7520		
	13 October 19 October	10 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	<u>≥</u> – c	2	~	4	2	9	7	∞	6	9	=	12	13	14	15	91	17	20	19	70	21	77	23	24		
	The first state of the first sta															`			/	ANOTE: SIDE PANELS	/ REMOVED FOR	VIEWING INTERNAL	PARTS.			18	4	= 10" 10-HOLE, 45

DFB12445GL 12" Four Hole, 45° Distributor Assembly


DESCRIPTION 12" 4-HOLE BODY WELDMENT INLET SLENCE WELDMENT BOLT HHCS 3/8-16 x 3/4" GR. 5 PLATED NUT FLANOWZ 3/8-16 ZN 0R5	BEARING 11/2" DODGE 4B SC FLANGE WASHER FLAT 1/2 SAE BOLT HHCS 1/2-13A-1/2 ZN GR6 1/2 - 13 INTLOCK NUT INDEXING SHAFT TRANSITION BOX SUPPORT WELDMENT TRANSITION BOX SPACER PLATE TRANSITION BOX W/LINER ASSY. SPRING PIN 250 x 250" LONG TRANSITION TUBE EXTENSION BRUSH/MNT, ASSEMBLY	BOLT HHCS 3/8-16X1-1/2 ZN GR2 NDEX STANDOFF 12" 4HOLE INDEX PLATE WASHER FLAT 3/8 USS ZN GR2 NDET TUBE ASSEMBLY BOLT HHCS 3/8-16 X 1.00 ZN GR2 3/8 - 16 NYLOCK NUT BOLT HHCS 3/8-16 X 1-10 ZN GR5	24 20 10 1
QTY 1 1 20 22	1 - 4 4 4 2 - 2	2 1 1 1 0 1 1 7 5 6 6 6 7 6 7 6 7 6 7 6 7 6 7 6 7 6 7	Sheet Sheet
PART # DF80230 DF80136 S-7105 S-968	KD-P8A0003 S-2120 S-8760 S-8760 PB0158 DF8014 DF80114 S-9288 DF80157	S-7521 DFB0038 DFB0031 S-248 DFB0050 DFB0146 S-7520 S-7520 S-7550 S-7555	10 10
$\begin{pmatrix} 21 \\ 23 \\ 6 \end{pmatrix}$		A PANELS REMOVED FOR VIEWING INTERNAL PARTS.	9 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)

DFB12645GL

12" Six Hole, 45° Distributor Assembly

PART # OTY DESCRIPTION	DFB0147 1 12" 6-HOLE BODY WELDMENT	DFB0136 1 INLET SLEEVE WELDMENT	S-7105 20 BOLI HHCS 3/8-16 x 3/4" GR. 5 PLATED	S-968 22 NUT FLANOWZ 3/8-16 ZN GR5	KD-PBA0003 1 BEARING 1 1/2" DODGE 4B SC FLANGE	S-2120 4 WASHER FLAT 1/2 SAE	S-8760 4 BOLT HHCS 1/2-13x1-1/2 ZN GR5	S-8260 4 1/2 - 13 NYLOCK NUT	DFB0158 1 INDEXING SHAFT	DFB0040 1 TRANSITION BOX SUPPORT WELDMENT	DFB0043 2 TRANSITION BOX SPACER PLATE	DFB0114 1 TRANSITION BOX W/LINER ASSY.	S-9288 5 SPRING PIN .250 x 2.50" LONG	DFB0159 1 TRANSITION TUBE EXTENSION	DFB0127 1 BRUSH/MNT. ASSEMBLY	S-7521 2 BOLT HHCS 3/8-16X1-1/2 ZN GR2	DFB0038 1 INDEX STANDOFF	DFB0148 1 12" 6HOLE INDEX PLATE	S-248 10 WASHER FLAT 3/8 USS ZN GR2	DFB0050 1 INDEX TUBE ASSEMBLY	-	S-7520 2 BOLT HHCS 3/8-16 X 1.00 ZN GR2	S-7383 6 3/8 - 16 NYLOCK NUT	S-7515 4 BOLT HHCS 3/8-16 x 1-1/2" ZN GR.5	Sheet 1 of 1 s N A R N A	thm BJT total 12-May-04
ITM PAF	1 0FB	2 DFB	3 S-	-S +	5 KD-PE	-S 9	-S 2-	-S	9 DFB	10 DFB	11 DFB	12 DFB	13 S-	14 DFB	15 DFB	16 S-	17 DFB	18 DFB	19 S-	20 DFB		22 S-	23 S-	24 S-		Fractions +/- 1/32" Decimals +/- ,031 Angles +/- 1,00
						\sim								(.		SIDE DANEIS	NOTE, SIDE TANELS DEMONED FOR VIEWING	_	$\left(\begin{array}{c}2\end{array}\right)$ INICANAL PARTS.	\prec	70/07			22	13 (19 00 00 00 00 00 00 00 00 00 00 00 00 00	L HANDLING DISTR

DFB12845GL 12" Eight Hole, 45° Distributor Assembly

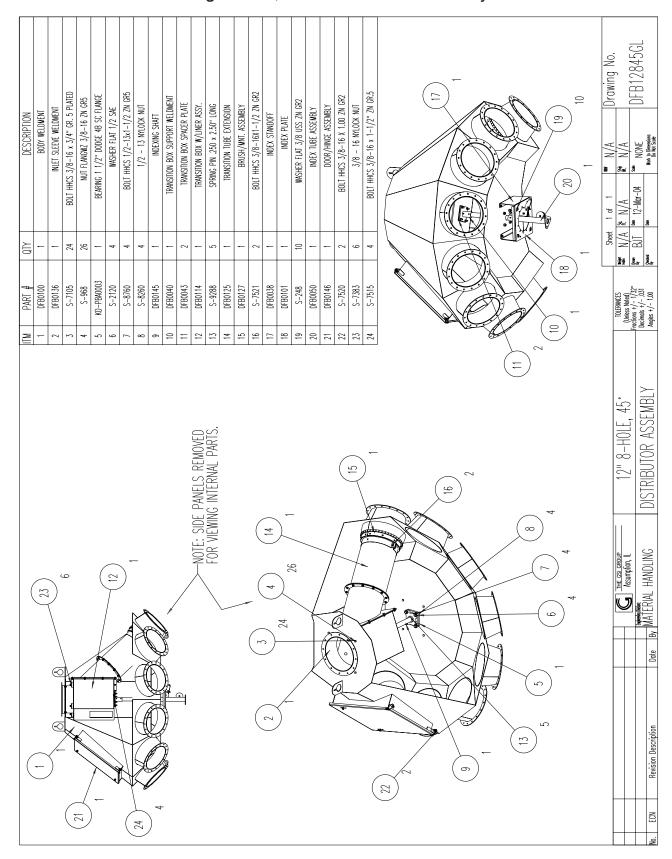

NOTES

WARRANTY

THE COMPANY AS MANUFACTURER WARRANTS ALL PRODUCTS MANUFACTURED BY THE COMPANY. TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USAGE AND CONDITIONS FOR A PERIOD OF TWELVE MONTHS AFTER RETAIL SALE TO THE ORIGINAL END USER OF SUCH PRODUCTS. THE COMPANY'S ONLY OBLIGATION IS, AND PURCHASER'S SOLE REMEDY SHALL BE FOR THE COMPANY, TO REPAIR OR REPLACE, AT IT'S OPTION AND EXPENSE, PRODUCTS THAT, IN IT'S SOLE JUDGMENT, CONTAIN A MATERIAL DEFECT DUE TO MATERIALS OR WORKMANSHIP. ALL DELIVERY AND SHIPMENT CHARGES TO AND FROM THE COMPANY'S FACTORY WILL BE PURCHASER'S RESPONSIBILITY. EXPENSES INCURRED BY OR ON BEHALF OF THE PURCHASER WITHOUT PRIOR WRITTEN AUTHORIZATION FROM AN AUTHORIZED EMPLOYEE OF THE COMPANY SHALL BE THE SOLE RESPONSIBILITY OF THE PURCHASER.

EXCEPT FOR THE ABOVE STATED EXPRESS LIMITED WARRANTIES, THE COMPANY MAKES NO WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE IN CONNECTION WITH (i) PRODUCT MANUFACTURED OR SOLD BY THE COMPANY OR (ii) ANY ADVICE, INSTRUCTION, RECOMMENDATION OR SUGGESTION PROVIDED BY AN AGENT, REPRESENTATIVE OR EMPLOYEE OF THE COMPANY REGARDING OR RELATED TO THE CONFIGURATION, INSTALLATION, LAYOUT, SUITABILITY FOR A PARTICULAR PURPOSE, OR DESIGN OF SUCH PRODUCT OR PRODUCTS.

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF ANTICIPATED PROFITS OR BENEFITS. PURCHASER'S SOLE AND EXCLUSIVE REMEDY SHALL BE LIMITED TO THAT STATED ABOVE, WHICH SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT PURCHASED. THIS WARRANTY IS NOT TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER. THE COMPANY SHALL HAVE NO OBLIGATION OR RESPONSIBILITY FOR ANY REPRESENTATIVE OR WARRANTIES MADE BY OR ON BEHALF OF ANY DEALER, AGENT OR DISTRIBUTOR OF THE COMPANY.

THE COMPANY ASSUMES NO RESPONSIBILITY FOR FIELD MODIFICATIONS OR ERECTION DEFECTS WHICH CREATE STRUCTURAL OR STORAGE QUALITY PROBLEMS. MODIFICATIONS TO THE PRODUCT NOT SPECIFICALLY COVERED BY THE CONTENTS OF THIS MANUAL WILL NULLIFY ANY PRODUCT WARRANTY THAT MIGHT HAVE BEEN OTHERWISE AVAILABLE.

THE FOREGOING WARRANTY SHALL NOT COVER PRODUCTS OR PARTS WHICH HAVE BEEN DAMAGED BY NEGLIGENT USE, MISUSE, ALTERATION OR ACCIDENT. THIS WARRANTY COVERS ONLY PRODUCTS MANUFACTURED BY THE COMPANY. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. THE COMPANY RESERVES THE RIGHT TO MAKE DESIGN OR SPECIFICATION CHANGES AT ANY TIME.

PRIOR TO INSTALLATION, PURCHASER HAS THE RESPONSIBILITY TO RESEARCH AND COMPLY WITH ALL FEDERAL, STATE AND LOCAL CODES WHICH MAY APPLY TO THE LOCATION AND INSTALLATION.

THE GSI GROUP



1004 E. Illinois St., Box 20 Assumption, IL 62510-0020 Ph: 217-226-4421