

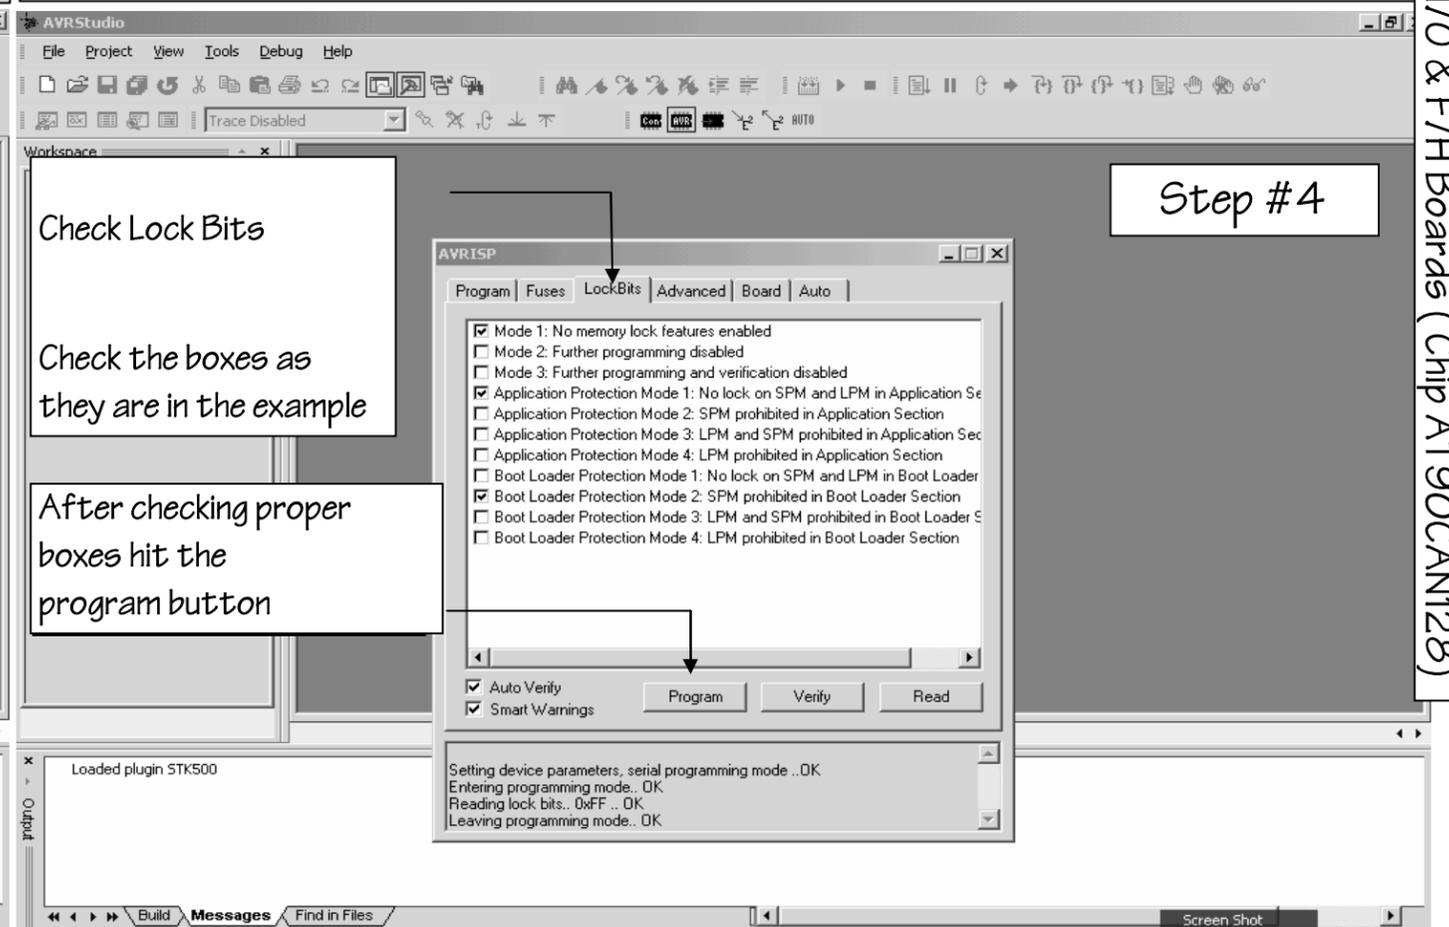
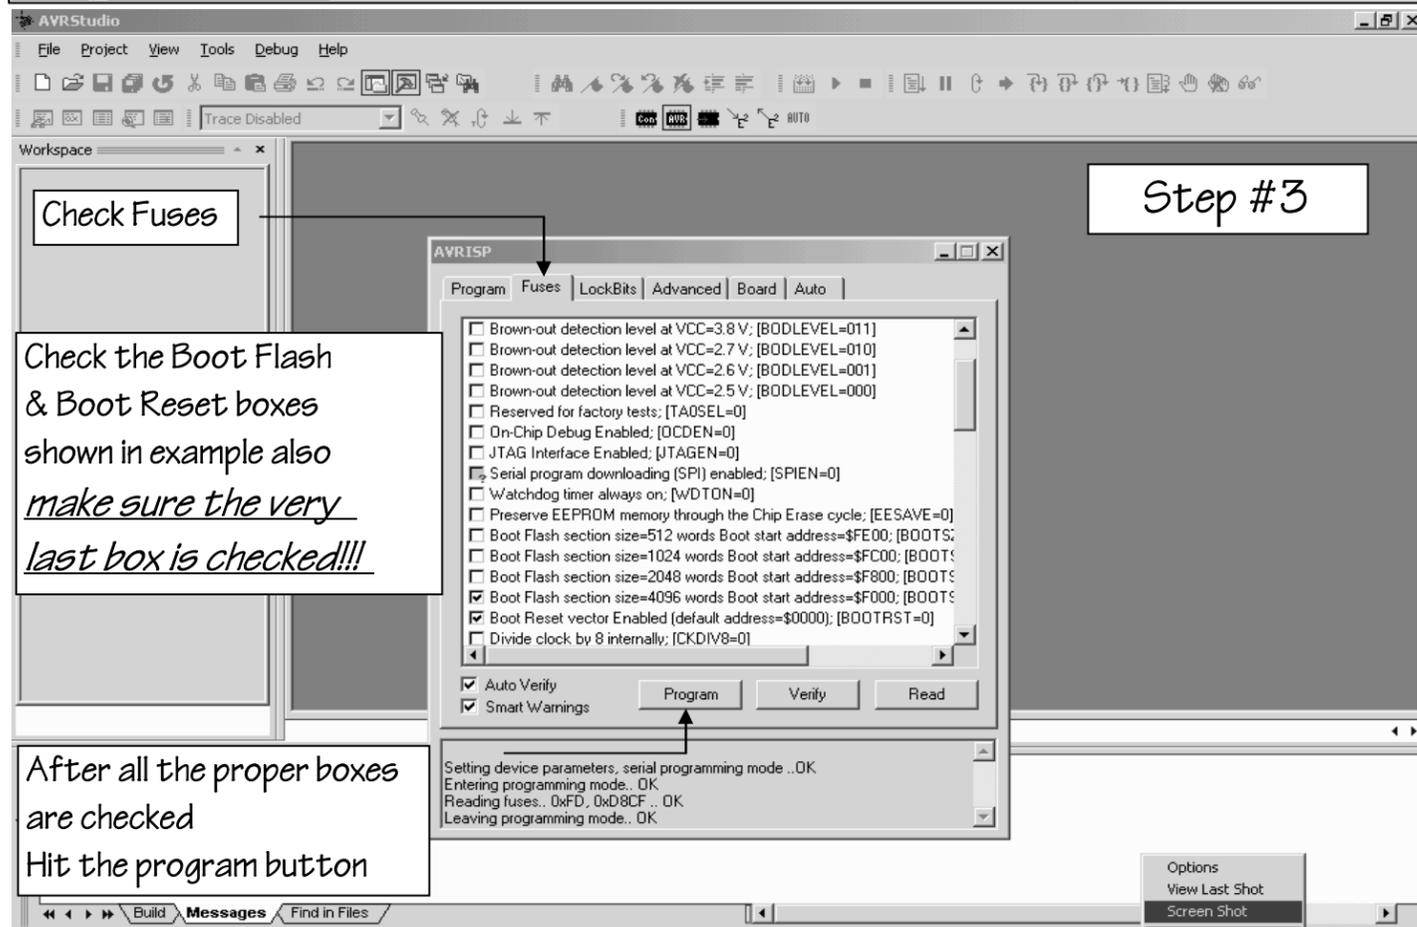
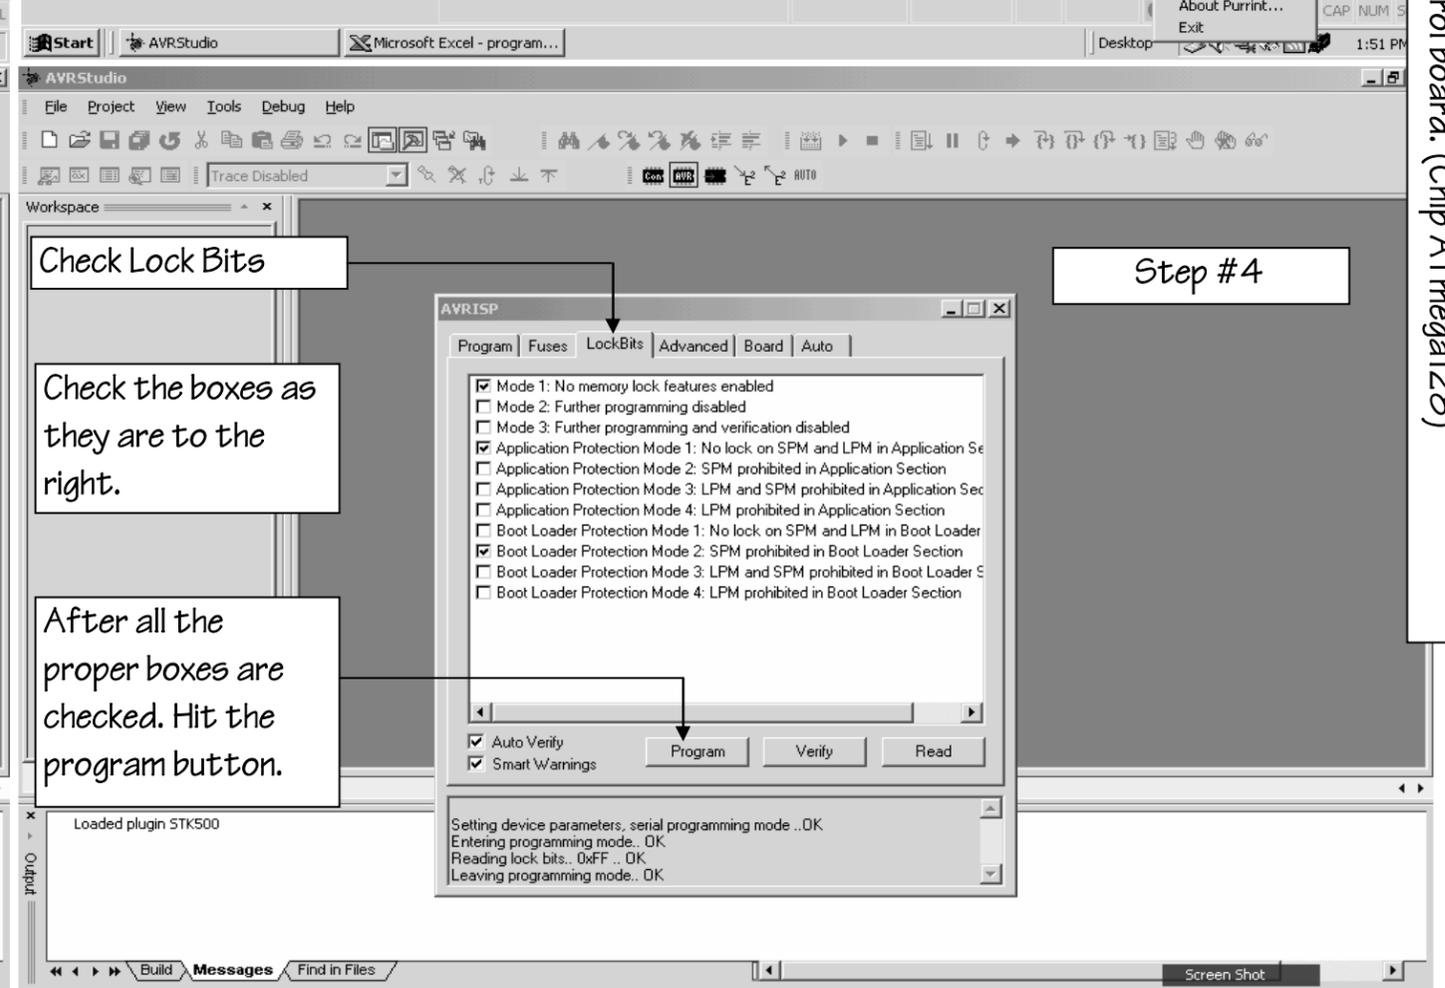
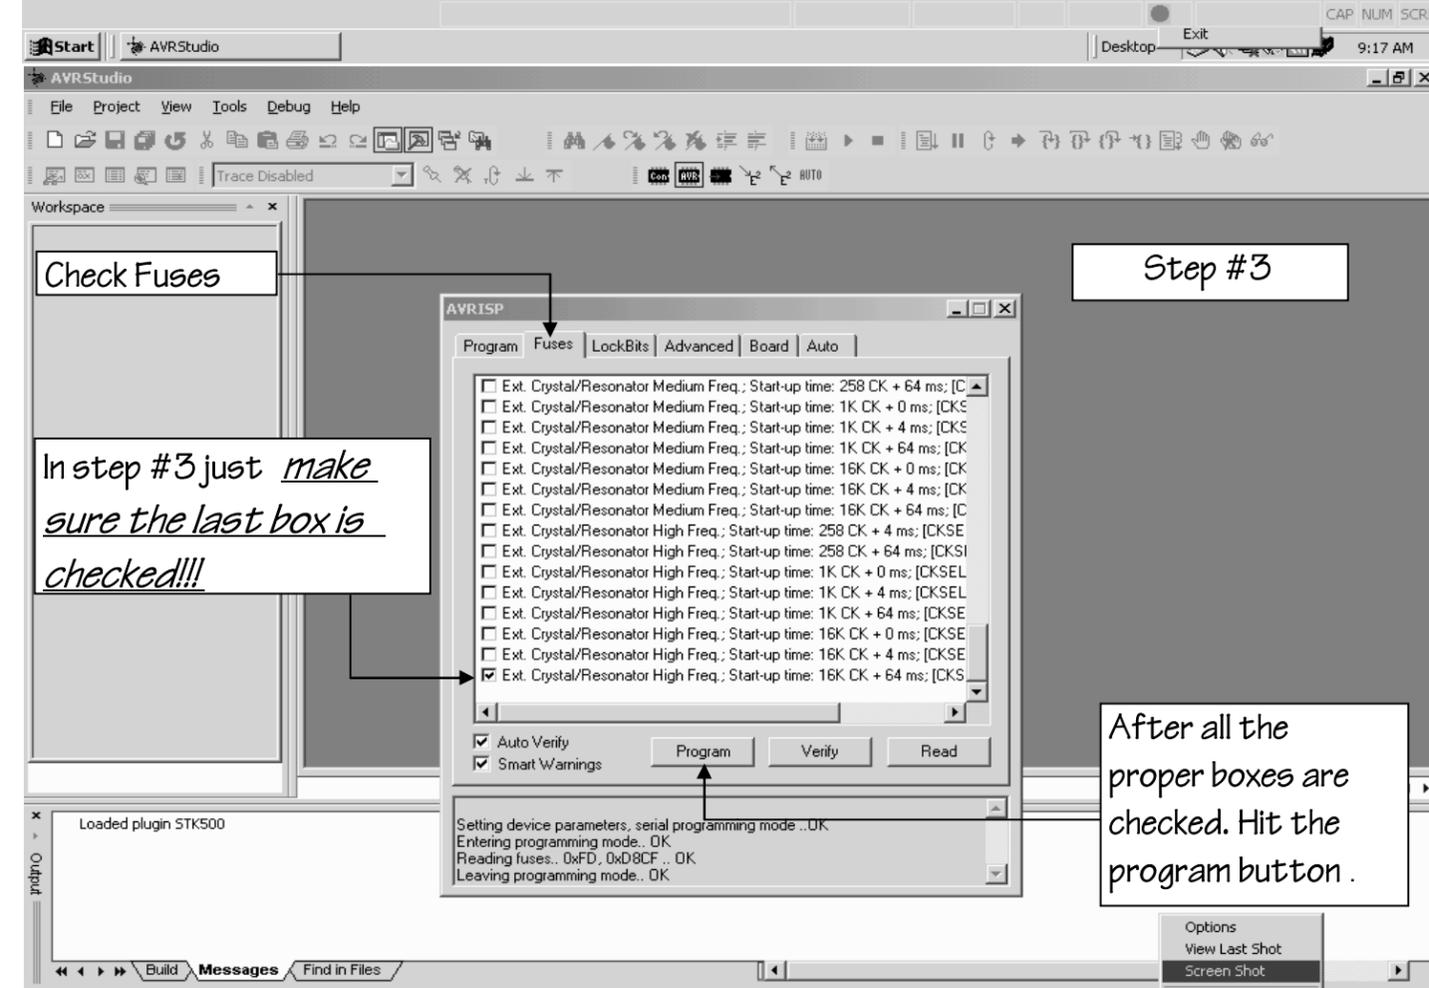


The following instructions are for loading the bootloader to each individual board. They are just for the Display I/O, Main I/O & F/H Boards (Chip AT90CAN128)

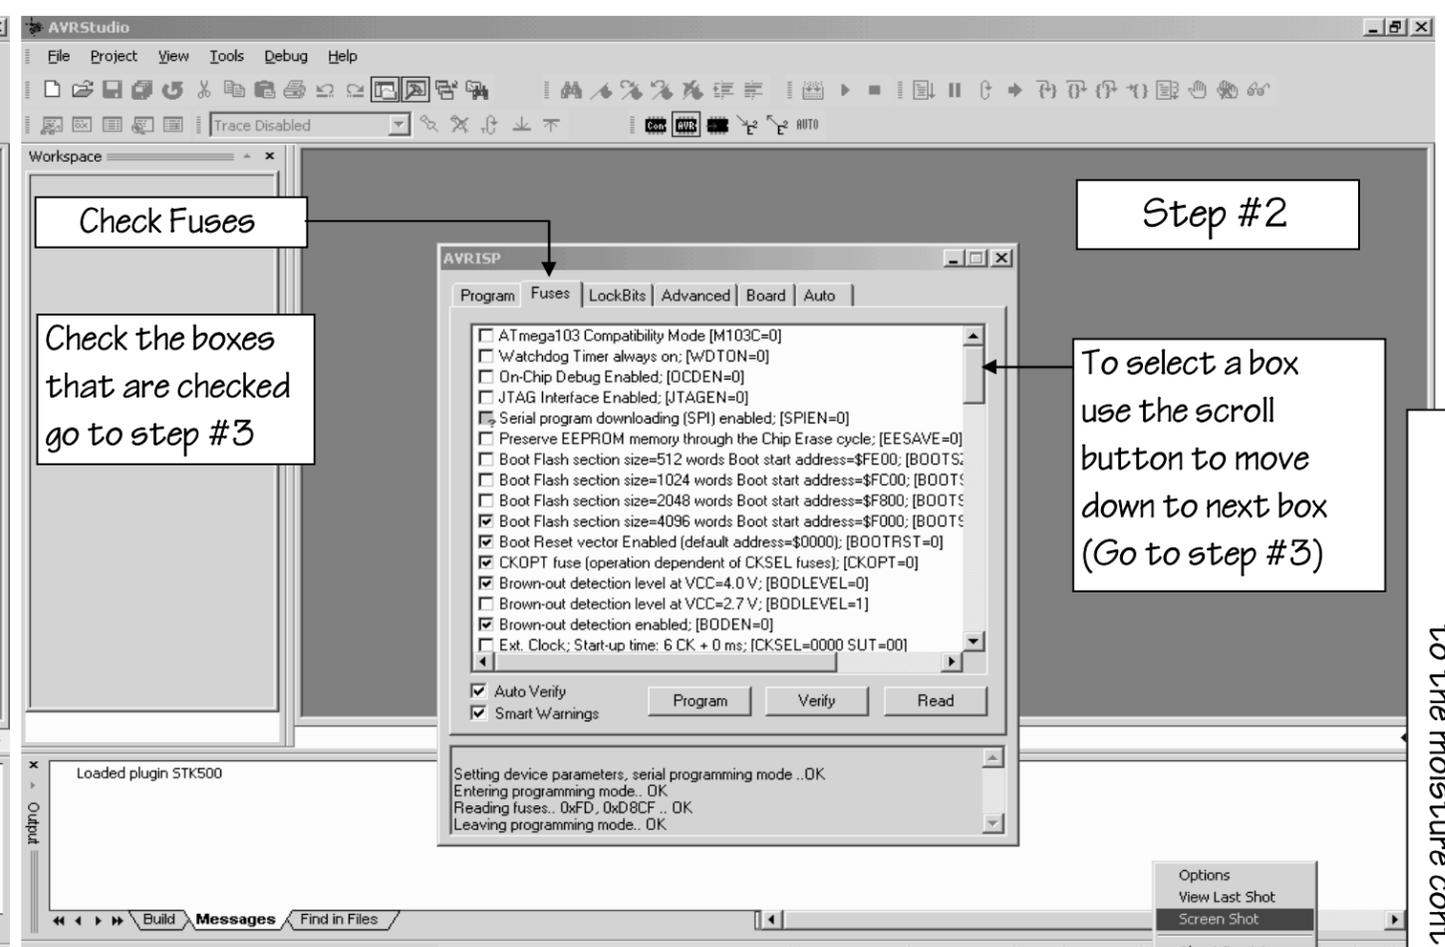

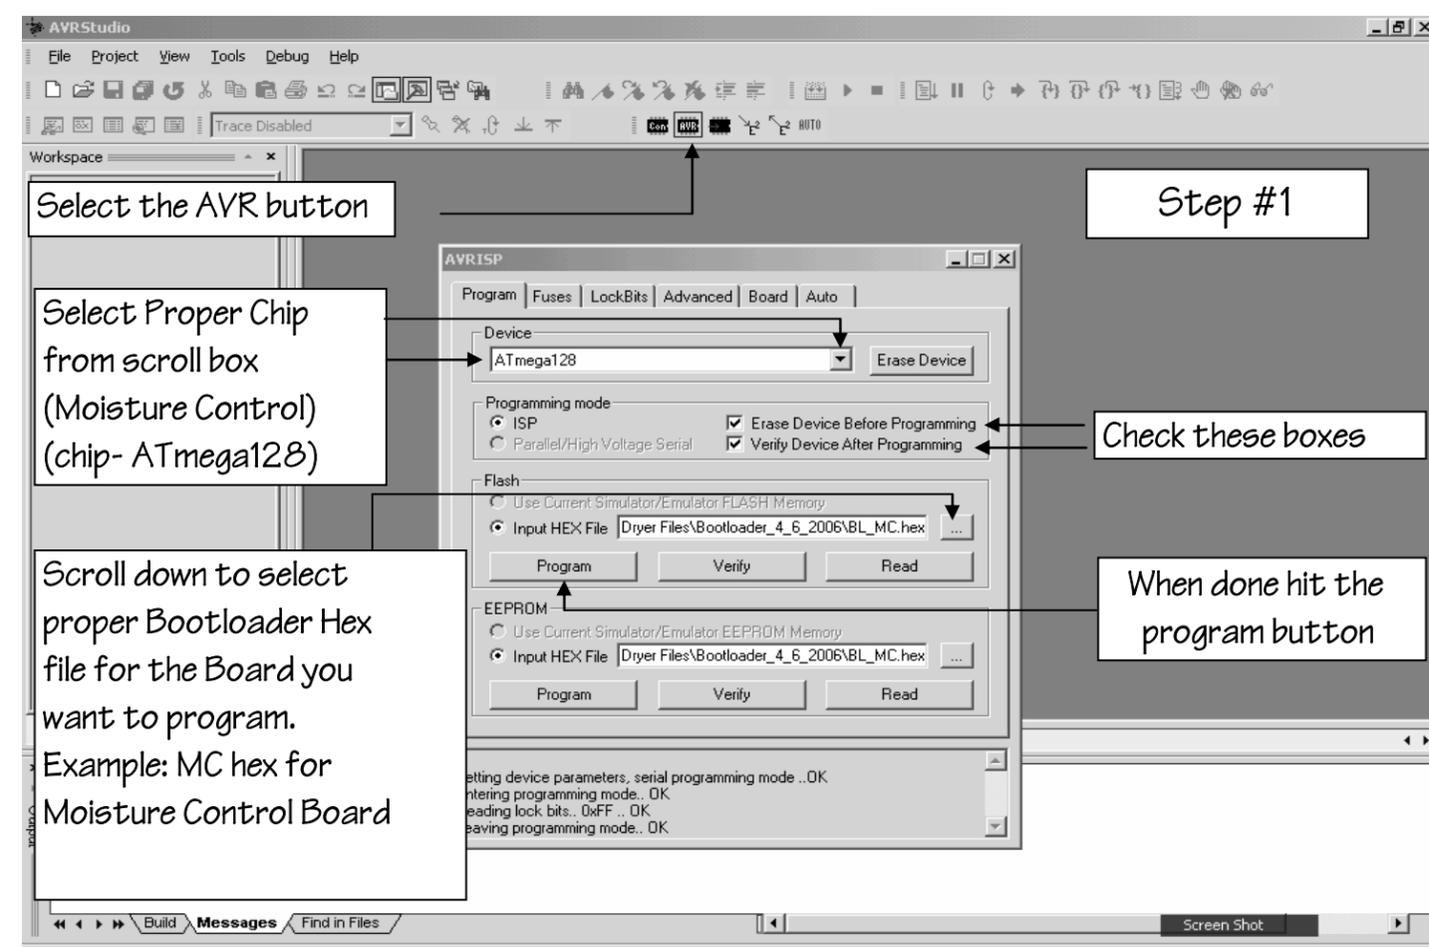

The following are instructions on how to load the bootloader to the moisture control board. (Chip ATmega128)